



SKMEI 1723 Operation Manual

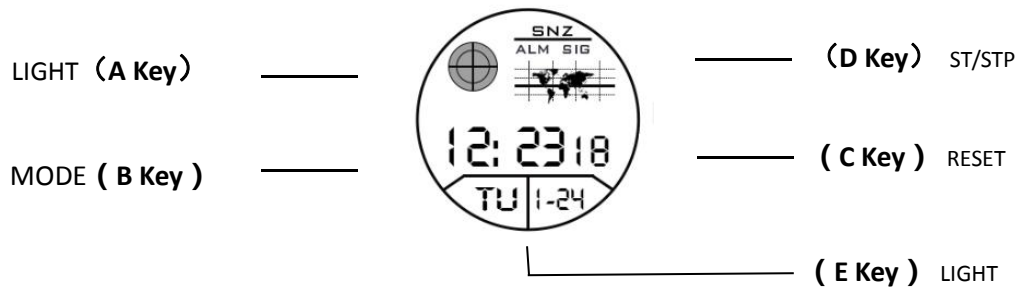

A . Features


- ★ 12 Digits LCD Display, Display Hour, Minute , Second , Month, Day, Year and Week
- ★ Daily Alarm and Chime hourly
- ★ Snooze function
- ★ 12 / 24H format selectable, Auto Calendar
- ★ 1/100 second Chronograph with split functions
- ★ Timer
- ★ Dual Time
- ★ EL backlight

B . Operational Manual

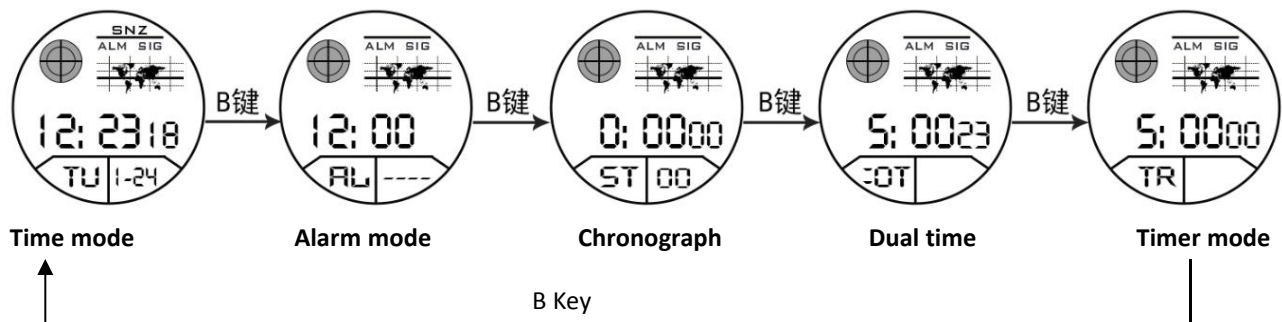

At any state ,press A or E key EL backlight for 2s .

Normal Time Mode

- ★ Time Setting
 - a). Press and hold C key for 2s to time setting mode and "Second" flashing, press D key to zero; Press B key to select item as following sequence :
 Second → Hour → Minute → Year → Month → Day

 - b). Press D key to adjust the flashing item,
 - c). Press C key to return to Normal Time Mode.
 - d). Press D key while the seconds are in the range of 30 to 59 resets them to 00 and adds 1 to the minutes .In the range of 00 to 59 resets them to 00 and adds to the minutes. In the range of 00 to 29,the minutes are unchanged.
 - e) 12/24-Hour format :In the timekeeping Mode, Use D to toggle between 12-hour (12H) and 24-hour (24H) timekeeping.

Daily Alarm Mode

- ★ In alarm mode, press C key to turn on/off the alarm and snooze function (ALM /SNZ) in turn.
- ★ In alarm mode, press D key once to enter the hourly timekeeping screen, press C key on this screen to turn on/off (SIG) the hourly timekeeping.
- ★ When the alarm is turned on, (ALM) will flash when the alarm set time is reached, and the alarm will sound for 10 seconds and then stop automatically.

Alarm setting

- ★ In Alarm Mode, Hold C key till the alarm Hours flashing enter into Alarm setting.
- ★ Press B to choose Alarm Hour -- Minute--Month--Date, Press D Key to adjust the data.
- ★ When you setting the Alarm Hour, pay attention to AM/PM.
- ★ When you setting the Alarm Month and Date, if you set the data of Month& Date, then on that Month& Date will alarm, if no data then means OFF the Month& Date alarm function.
- ★ If you ON the Alarm function, the alarm symbol will show in each Mode.
- ★ Press C to exit.

Remarks: Set the month, day, hour, and minute of the alarm clock to make the alarm sound. when it reaches the set date and time; "--" means all. for example, if the month is set to "--" the alarm will sound every month.

Chronograph

- ★ Press D key to Start/Stop running ;
- ★ When stop, press C key to zero.
- ★ When running, press C key to split Counting. Then press D key to exit split count, and stop counting ; When exit split count, press C key to zero.
- ★ When running, press B key to return to Real Time mode, and it running at back.

Dual Time Mode

- ★ In Normal Time mode, Press B key 3 times to enter Dual Time Mode,
- ★ Press and hold C key for 2s to select " Hour " setting, Press B key to select " Minute " setting,
- ★ Press D key to adjust the flashing item,
- ★ Press C key again to finish setting, and return to Dual Time displaying mode .

Timer Mode

- ★ The display range of the timer is 23hour 59minute 59 second.
- ★ Timer alarm sounds for about 15 seconds when counting down to 0:00:00. The timer is automatically reset to its starting value after the alarm stops.
- ★ Timer Time setting
- ★ Press and hold C key for 2s to time setting state and "Hour" flashing, Press B key to select "Hour" or "Minute" setting, Press D key to adjust the flashing item, Press C key to complete setting.
- ★ Timer operation
Press D key to Start/Stop counting ; Press C key to starting value when stop counting.